

DISMANTLING PROCEDURE

This product should be dismantled for disposal when it reaches the end of its life. Ensure that the electrical supply is disconnected before removal from the installation. Consult a qualified electrician if in any doubt.

Product type:	Downlights
Product codes:	WD12RGBW
Dismantling procedure:	
<ol style="list-style-type: none"> 1. Remove the bezel from the front of the fitting by twisting anticlockwise 2. Use a small flat screwdriver to pop out the three tabs securing the diffuser 3. Remove the gasket 4. Unscrew and extract the light source along with the reflector, cut through the cables to the light source 5. Unscrew the cable retaining bracket and remove the flex 	
Recycling material:	
Bezel	Metal
Housing	
Screws	
Diffuser	Plastic
Gasket	Non-recyclable
Reflector	
Light source	Electrical goods
Driver	
Flex	

Advice from local recycling facilities should be sought as to specific types of waste which may be accepted.