

DISMANTLING PROCEDURE

This product should be dismantled for disposal when it reaches the end of its life. Ensure that the electrical supply is disconnected before removal from the installation. Consult a qualified electrician if in any doubt.

Product type:	Outdoor Aluminium Range
Product codes:	LWALL1A, LWALL2A, LWALL3A
Dismantling procedure:	
<ol style="list-style-type: none"> 1. Remove hex screws in the side of fitting to separate the backplate 2. Remove grommet from backplate 3. Remove terminal block and cut away as much wiring as possible. 	
Recycling material:	
Backplate	Metal
Screws	
Luminaire housing	Electrical goods
Terminal block	
Internal wiring	
Grommet	Non-recyclable

Product codes:	LSPIKEA
Dismantling procedure:	
<ol style="list-style-type: none"> 1. Unscrew and remove spike from luminaire housing 2. Cut flex as close to the fitting as possible 	
Recycling material:	
Spike	Metal
Luminaire housing	Electrical goods
Flex	

Advice from local recycling facilities should be sought as to specific types of waste which may be accepted.