

DISMANTLING PROCEDURE

This product should be dismantled for disposal when it reaches the end of its life. Ensure that the electrical supply is disconnected before removal from the installation. Consult a qualified electrician if in any doubt.

Product type:	Outdoor Wall Light
Product codes:	WAD12Axx
Dismantling procedure:	
<ol style="list-style-type: none"> 1. Remove hex screws in sides of fitting to separate the backplate 2. Remove the level insert from the backplate with the use of a small flat screwdriver 3. Prise the diffuser away from the light source with a small flat screwdriver 4. Remove the reflector and light source 5. Unscrew and remove the driver, terminal block, and all internal wiring from the luminaire housing 	
Recycling material:	
Backplate	Metal
Luminaire housing	
Screws	
Light source	Electrical goods
Driver	
Internal wiring	
Level	Non-recyclable
Diffuser	
Reflector	

Advice from local recycling facilities should be sought as to specific types of waste which may be accepted.