

DISMANTLING PROCEDURE

This product should be dismantled for disposal when it reaches the end of its life. Ensure that the electrical supply is disconnected before removal from the installation. Consult a qualified electrician if in any doubt.

| | |
|---|---------------------|
| Product type: | Recessed Wall Light |
| Product codes: | NH023xx, NH025xx |
| Dismantling procedure: | |
| <ol style="list-style-type: none"> 1. Remove the front fascia by inserting a screwdriver at the side and levering off 2. Unscrew and remove the driver, terminal block, light source and all internal wiring from the frame | |
| Recycling material: | |
| Fascia | Metal |
| Frame | |
| Driver | Electrical goods |
| Terminal block | |
| Light source | |
| Internal wiring | |

Advice from local recycling facilities should be sought as to specific types of waste which may be accepted.