



INSTALLATION & MAINTENANCE MANUAL

BTEVDALIEM

GENERAL INSTRUCTIONS

These instructions should be read carefully and retained after installation by the end user for future reference and maintenance.

These instructions should be used to aid installation of the following product:

BTEVDALIEM

SAFETY

- This product must be installed in accordance with the latest edition of the IEE Wiring Regulations (BS7671) and current Building Regulations. If in any doubt, consult a qualified electrician
- Please isolate mains prior to installation or maintenance
- Check the total load on the circuit (including when this luminaire is fitted) does not exceed the rating of the circuit cable, fuse or circuit breaker
- Please note the IP (Ingress Protection) rating of this product when deciding the location for installation
- This product is Class II double insulated
- This product is IP65 rated

INSTALLATION

Note - If this luminaire is being used in conjunction with an external PIR or sensor, please confirm with the manufacturer of the sensors that they are compatible with LED luminaires.

- Provide power to the required point of installation (refer to BS7671 for correct cabling methods). Suitable IP rated junction boxes should be used where required
- Remove the bezel surround by unclipping from the luminaire housing, then remove the diffuser by rotating anticlockwise (see Fig. 1)

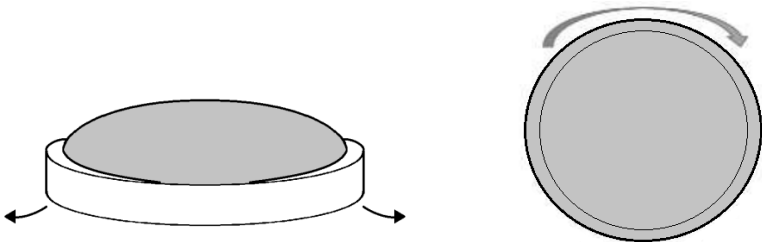


Fig. 1

- Unscrew the fastening screw securing the LED plate and open the LED plate (see Fig. 2)

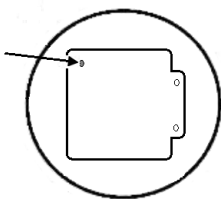


Fig. 2

- Drill the fixing holes in the rear of the fitting. Mark the location of the fixing holes and drill ensuring not to infringe with any gas/water pipes or electrical cables
- Feed the mains cable through the rubber grommet to retain IP rating, and secure the baseplate to the surface
- Replace the access plate and screws ensuring gasket is in place, then tighten the compression gland ensuring a tight seal to maintain the IP rating
- Ensuring correct polarity is observed, carefully wire as shown in Fig. 3. The earth terminal is non-functional and only provided for convenience. Two cables can be inserted into the push-fit terminal block in order to achieve loop-in/loop-out wiring

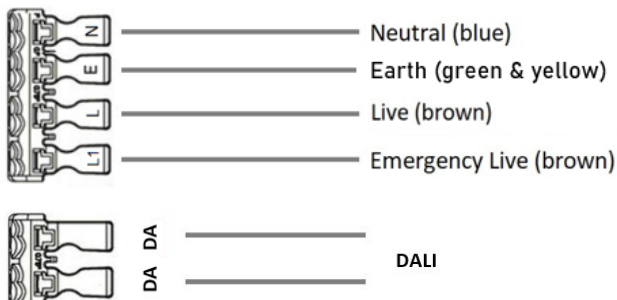


Fig. 3

- Select the required colour temperature via the three-position switch on the gear tray and required wattage via the three-position dip switches on the side of the driver (see Fig. 4)

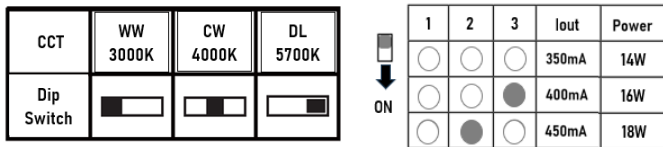


Fig. 4

- Ensure the battery is connected to the battery connector on the PCB
- Refasten the LED plate screw
- Roate the diffuser firmly onto the luminaire body, ensuring a tight seal is made, then clip the bezel surround into place

- Switch on and check for correct operation ensuring the green indicator LED is illuminated
- See below for operation of the self-test function
- We recommend, on commissioning the installation, a minimum charge period of 24 hours before carrying out an emergency duration test


WARNING

This product must be disconnected from the circuit if subjected to any high voltage or insulation resistance testing. Irreparable damage will occur if this instruction is not followed.

GENERAL

This product contains a light source of energy efficiency class D to Regulation (EU) No. 2019/2015 and (UK) 2021 No. 1095.

This product contains and a control gear which can be replaced by a professional.

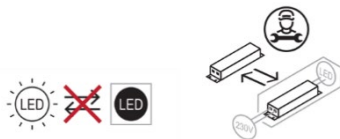

Clean the external surfaces with a damp cloth using a mild solution of detergent and warm water only, do not use aggressive cleaning products or solvents which may damage the product.

Do not use any source of high-pressure washers to maintain or clean this luminaire.

Installing in areas where the temperature consistently drops below 0°C may shorten the battery life.

The maximum constant ambient temperature at the point of installation should not exceed 50°C.

This product is DALI compatible. Relevant DALI software and control gear is required for use of this functionality.

This product should be dismantled for disposal when it reaches the end of its life. Please see website for dismantling instructions.

This product should be recycled in the correct manner when it reaches the end of its life. Check local authorities for where facilities exist.

The batteries in this luminaire are Lithium Ion and must be disposed of correctly. Please contact the local authorities for the disposal of this toxic waste.

WARRANTY

This product has a warranty of 5 years (including battery) from date of purchase. Failure to install this product in accordance with the current edition of the IEE Wiring Regulations (BS7671), improper use, or removal of the batch code will invalidate the warranty. If this product should fail within its warranty period, it should be returned to the place of purchase for a free of charge replacement. ML Accessories does not accept responsibility for any installation costs associated with the replacement product. Your statutory rights are not affected. ML Accessories reserve the right to alter product specification without prior notice.

TESTING FOR EMERGENCY LUMINAIRES

Recommended routine test procedure in accordance with BS5266:

- Daily check – check LED charge indicator is illuminated
- Monthly functional test – simulate a mains supply failure for approx. 30 seconds by operation of key switch or switching off circuit breaker. Ensure normal supply is restored after test and ensure charge indicator is illuminated
- Annual 3-hour duration test – simulate a mains supply failure for 3-hour continuous test by operation of key switch or switching off circuit breaker. Ensure normal supply is restored after test and ensure charge indicator is illuminated
- If the luminaire fails any of the above tests, please contact a qualified electrician. See below for test record sheet

TEST RECORD SHEET											
INITIAL COMMISSIONING 3 HOUR TEST		SIGNED				DATE					
MONTH	TEST	FIRST YEAR		SECOND YEAR		THIRD YEAR		FOURTH YEAR		FIFTH YEAR	
		SIGNED	DATE	SIGNED	DATE	SIGNED	DATE	SIGNED	DATE	SIGNED	DATE
1	FUNCTIONAL										
2	FUNCTIONAL										
3	FUNCTIONAL										
4	FUNCTIONAL										
5	FUNCTIONAL										
6	FUNCTIONAL										
7	FUNCTIONAL										
8	FUNCTIONAL										
9	FUNCTIONAL										
10	FUNCTIONAL										
11	FUNCTIONAL										
12	3 HOUR										

Installed by:

Installation date:

Contact number:

SUPPLIED BY:

(UK) MANUFACTURER

ML ACCESSORIES LTD, UNIT E CHILTERN PARK,
BOSCOMBE ROAD, DUNSTABLE LU5 4LT,
WWW.MLACCESSORIES.CO.UK

(EU) AUTHORISED REPRESENTATIVE

SLV LIGHTING GROUP,
DAIMLERSTRASSE 21-23,
52531 ÜBACH-PALENBERG, GERMANY
EMAIL: EPREL@GROUP.SLV.COM

MADE IN CHINA

230V
50Hz



IP65

>85
CRI

-20~
40°C
TA



ML
ACCESSORIES LTD



**UK
CA**

CE



02