

## DISMANTLING PROCEDURE

This product should be dismantled for disposal when it reaches the end of its life. Ensure that the electrical supply is disconnected before removal from the installation. Consult a qualified electrician if in any doubt.

|                                                                                                                                                                                                                                                                                                                                                                    |                  |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------|
| Product type:                                                                                                                                                                                                                                                                                                                                                      | Bulkhead         |
| Product codes:                                                                                                                                                                                                                                                                                                                                                     | BTEVxx           |
| Dismantling procedure:                                                                                                                                                                                                                                                                                                                                             |                  |
| <ol style="list-style-type: none"> <li>1. Remove diffuser and separate diffuser screws (if fitted) from diffuser body</li> <li>2. Unscrew and remove LED gear tray, driver, sensor (if fitted), emergency inverter (if fitted), and battery (if fitted) from luminaire housing</li> <li>3. Remove any remaining screws or wiring from luminaire housing</li> </ol> |                  |
| Recycling material:                                                                                                                                                                                                                                                                                                                                                |                  |
| Diffuser and luminaire housing                                                                                                                                                                                                                                                                                                                                     | Plastic or Metal |
| LED gear tray                                                                                                                                                                                                                                                                                                                                                      | Electrical goods |
| Driver                                                                                                                                                                                                                                                                                                                                                             |                  |
| Sensor                                                                                                                                                                                                                                                                                                                                                             |                  |
| Emergency inverter                                                                                                                                                                                                                                                                                                                                                 |                  |
| Battery                                                                                                                                                                                                                                                                                                                                                            | Batteries        |
| Screws                                                                                                                                                                                                                                                                                                                                                             | Metal            |

*Advice from local recycling facilities should be sought as to specific types of waste which may be accepted.*