



INSTALLATION & MAINTENANCE MANUAL

SFPLxx

GENERAL INSTRUCTIONS

These instructions should be read carefully and retained after installation by the end user for future reference and maintenance.

**These instructions should be used to aid installation of the following products:
SFPLAB / SFPLBB / SFPLBC / SFPLMB / SFPLMW / SFPLPB**

SAFETY

- These products must be installed in accordance with the latest edition of the IEE Wiring Regulations (BS7671) and current Building Regulations. If in any doubt, consult a qualified electrician
- Please isolate mains prior to installation or maintenance
- Check the total load on the circuit (including when these luminaires are fitted) does not exceed the rating of the circuit cable, fuse or circuit breaker
- Please note the IP (Ingress Protection) rating of these products when deciding the location for installation
- These products are for indoor use only
- These products are Class I and must be earthed
- These products are IP20 rated

INSTALLATION

Note - If these luminaires are being used in conjunction with an external PIR or sensor, please confirm with the manufacturer of the sensors that they are compatible with LED luminaires.

- Provide power to the required point of installation
- Ensure the wall surface is flat and smooth
- This unit is fitted with a gasket – this must not be removed: this gasket is to stop discolouration of the plate due to natural moisture in some wall finishes
- These products must be fitted only after painting and decorating is complete
- Remove the front plate by placing a flat-head screwdriver in the notch at the side and lever off gently (see Fig. 1)



Fig. 1

- All connections must be made and maintained. Use green/yellow sleeving on earth conductors that are not insulated
- Check all electrical connections are secure with all exposed copper within the terminal and no loose strands of cable
- Fit the unit into a suitable wall box taking care not to compress, damage, or trap any cables and secure with screws provided. If using metal mounting boxes with four lugs, remove the top and bottom lugs or bend fully back
- Clip the front plate onto the main assembly ensuring the screwdriver notch is at the side
- Switch on and check for correct operation

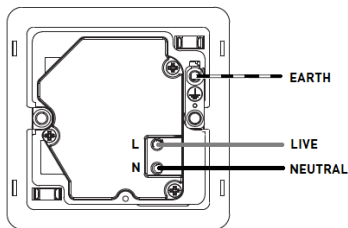


Fig. 2

WARNING

These products must be disconnected from the circuit if subjected to any high voltage or insulation resistance testing. Irreparable damage will occur if this instruction is not followed.

GENERAL

Clean with a soft dry cloth only, do not use aggressive cleaning products or solvents which may damage the product. These products are non-dimmable.

These products should be recycled in the correct manner when it reaches the end of its life. Check local authorities for where facilities exist.

WARRANTY

These products have a warranty of 2 years from date of purchase. Failure to install these products in accordance with the current edition of the IEE Wiring Regulations (BS7671), improper use, or removal of the batch code will invalidate the warranty. If these products should fail within its warranty period, it should be returned to the place of purchase for a free of charge replacement. ML Accessories does not accept responsibility for any installation costs associated with the replacement product. Your statutory rights are not affected. ML Accessories reserve the right to alter product specification without prior notice.

SUPPLIED BY:

(UK) MANUFACTURER

ML ACCESSORIES LTD, UNIT E CHILTERN PARK,
BOSCOMBE ROAD, DUNSTABLE LU5 4LT,
WWW.MLACCESSORIES.CO.UK

(EU) AUTHORISED REPRESENTATIVE

SLV LIGHTING GROUP,
DAIMLERSTRASSE 21-23,
52531 ÜBACH-PALENBERG, GERMANY
EMAIL: EPREL@GROUP.SLV.COM

MADE IN CHINA



ML
ACCESSORIES LTD



**UK
CA**

