

INSTALLATION & MAINTENANCE MANUAL

IP3G / IP5G / OP3GBK / OP5GBK

GENERAL INSTRUCTIONS

These instructions should be read carefully and retained after installation by the end user for future reference and maintenance.

These instructions should be used to aid installation of the following products: IP3G / IP5G / OP3GBK / OP5GBK

SAFETY

- This product must be installed in accordance with the latest edition of the IEE Wiring Regulations (BS7671) and current Building Regulations. If in any doubt, consult a qualified electrician
- Please isolate mains prior to installation or maintenance
- Check the total load on the circuit (including when this product is fitted) does not exceed the rating of the circuit cable, fuse or circuit breaker
- Please note the IP (Ingress Protection) rating of this product when deciding the location for installation
- Do not overload this accessory or subject it to conditions outside its rating
- This product is Class I and must be earthed
- This product is IP66 rated

INSTALLATION

- Provide power to the required point of installation (refer to BS7671 for correct cabling methods). Suitable IP rated junction boxes should be used where required
- Round cable should be used for the mains supply and connected loads. The use of flat cable will cause water ingress
- Remove the fixing screws securing the front cover
- Drill the fixing holes in the rear of the box. Mark the location of the fixing holes and drill
 ensuring not to infringe with any gas/water pipes or electrical cables
- Fix the box to a solid surface using suitable screws and wall plugs (not included). The output compression glands should be facing downwards
- Refit the screw mounting hole caps (failure to fit these caps will compromise the IP rating)
- Unscrew the sealing nut from the compression gland (see Fig. 1) and fit it over the supply cable



- Remove the protective insert from the compression gland leaving the rubber gasket and compression gland in place, and pass the supply cable through the compression gland
- Repeat for load cables as required. Each output is individually fused and the rating of the fuse is marked on the PCB. Do not exceed the maximum load shown (see Fig. 2)

	Output 1	Output 2	Output 3	Output 4	Output 5
IP3G / OP3GBK	8A	2.5A	2.5A	-	-
IP5G / OP5GBK	5A	2.5A	2.5A	2A	1A

Fig. 2

• Connect the incoming power ensuring the correct polarity is observed (see Fig. 3) L - Live (brown), N - Neutral (blue), E - Earth (green/yellow)





- Secure the cables in place via the cable clamps, then tighten the compression glands ensuring a good seal is made around each cable
- Refasten the cover and secure with the screws provided do not overtighten
- Switch on and check for correct operation

WARNING

This product must be disconnected from the circuit if subjected to any high voltage or insulation resistance testing. Irreparable damage will occur if this instruction is not followed.

GENERAL

This product should be recycled in the correct manner when it reaches the end of its life. Check local authorities for where facilities exist.

Clean the external surfaces with a damp cloth using a mild solution of detergent and warm water only, do not use aggressive cleaning products or solvents which may damage the product.

Do not use any source of high-pressure washers to maintain or clean this product.

WARRANTY

This product has a warranty of 1 year from date of purchase. Failure to install this product in accordance with the current edition of the IEE Wiring Regulations (BS7671), improper use, or removal of the batch code will invalidate the warranty. If this product should fail within its warranty period, it should be returned to the place of purchase for a free of charge replacement. ML Accessories does not accept responsibility for any installation costs associated with the replacement product. Your statutory rights are not affected. ML Accessories reserve the right to alter product specification without prior notice.



ML Accessories Limited LU5 4LT www.mlaccessories.co.uk Made in China

