



INSTALLATION & MAINTENANCE MANUAL

**VFRDGICxx / VFRSGICxx / VFRSHGICxx**

## GENERAL INSTRUCTIONS

**These instructions should be read carefully and retained after installation by the end-user for future reference and maintenance.**


**These instructions should be used to aid the installation of the following products: VFRDGCxx / VFRSGCxx / VFRSHGCxx**

## SAFETY

- This product must be installed in accordance with the latest edition of the IEE Wiring Regulations (BS7671) and current Building Regulations. If in any doubt, consult a qualified electrician
- Please isolate mains prior to installation or maintenance
- Please note the IP (Ingress Protection) rating of this fitting when deciding the location for installation
- If used under insulation, the insulation should be laid unbroken over the fitting (not packed around it). Only mineral wool style insulation may be used
- This product is Class I and must be earthed
- The VFRDGCxx and VFRSGCxx series is IP20 rated, the VFRSHGCxx series is IP65 (IP20 from above)


## INSTALLATION

- Provide power to the required point of installation
- Cut a suitable hole in the mounting surface as per the cut-out details (see Fig. 1) ensuring not to infringe with any joists, gas/water pipes or electrical cables

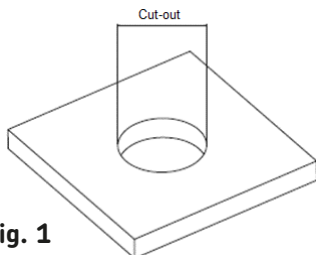

**Fig. 1**


Part code	Cut-out
VFRDGICxx	72mm
VFRSGICxx	84mm
VFRSHGICxx	70mm

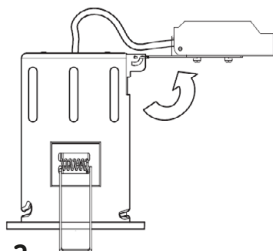

**Fig. 2**


- Fold out the terminal bracket until it locks into position (see Fig. 2)

- Open the terminal access cover with the aid of a slotted screwdriver (see Fig. 3)

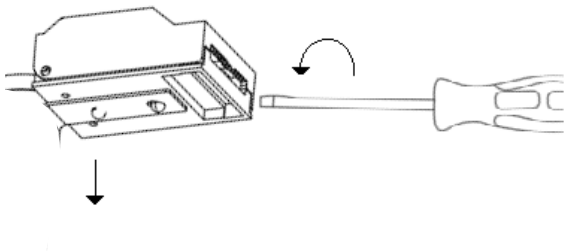


**Fig. 3**

- Connect the fitting to the mains supply ensuring that correct polarity is observed (see Fig. 4): L - Live (Brown), E - Earth (Green/Yellow), N - Neutral (Blue)

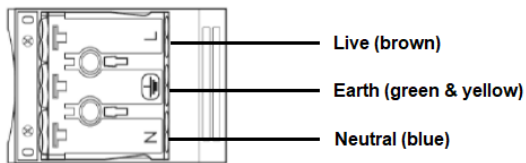


**Fig. 4**

- Ensure the strain relief is used to secure the mains input cable
- Loop in/loop out wiring can be achieved with the push-fit terminal block
- Lift both spring clips on the sides of the fitting and push into the ceiling (see Fig. 5)

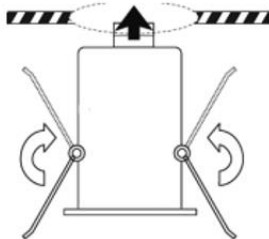


**Fig. 5**

- Remove the bezel by turning anti-clockwise 45°, insert a suitable GU10 lamp into the lock ring lamp clip and connect a lamp to the lamp holder (see Fig. 6)

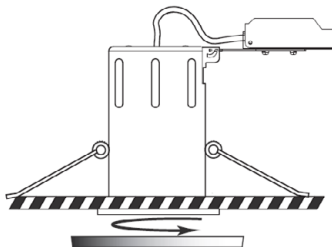

**Fig. 6**

- Push the lamp and lock-ring up into position in the body of the downlight and secure the lock-ring by turning clockwise 45°
- For VFRSHGICxx series, please ensure both gaskets are in place. One gasket is pre-installed with the bezel and the second gasket should be installed around the base of the fitting (see Fig. 7)
- Switch on and check for correct operation.

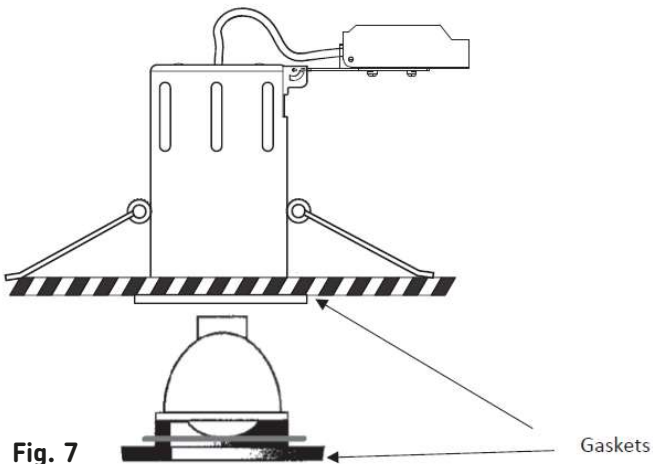

**Fig. 7**

## GENERAL

This product should be recycled in the correct manner when it reaches the end of its life.

Check local authorities for where facilities exist.

Clean with a soft dry cloth only, do not use aggressive cleaning products or solvents which may damage the product.

This product is dimmable dependent on lamp type.

## WARRANTY

This product has a warranty of 1 year from date of purchase. Failure to install this product in accordance with the current edition of the IEE Wiring Regulations (BS7671), improper use, or removal of the batch code will invalidate the warranty. If this product should fail within its warranty period, it should be returned to the place of purchase for a free of charge replacement. ML Accessories does not accept responsibility for any installation costs associated with the replacement product. Your statutory rights are not affected. ML Accessories reserve the right to alter product specification without prior notice.

INTERNATIONAL  
CONTACT DETAILS



**ML**  
ACCESSORIES LTD



**UK  
CA**



08

ML Accessories Limited LU5 4LT  
[www.mlaccessories.co.uk](http://www.mlaccessories.co.uk)