



INSTALLATION & MAINTENANCE MANUAL

EMLED4DA

GENERAL INSTRUCTIONS

These instructions should be read carefully and retained after installation by the end user for future reference and maintenance.

**These instructions should be used to aid installation of the following product:
EMLED4DA**

SAFETY

- This product must be installed in accordance with the latest edition of the IEE Wiring Regulations (BS7671) and current Building Regulations. If in any doubt, consult a qualified electrician
- Please isolate mains prior to installation or maintenance
- Check the total load on the circuit (including when this luminaire is fitted) does not exceed the rating of the circuit cable, fuse or circuit breaker
- Please note the IP (Ingress Protection) rating of this product when deciding the location for installation
- This product is Class II double insulated
- This product is IP65 rated

INSTALLATION

Note - If this luminaire is being used in conjunction with an external PIR or sensor, please confirm with the manufacturer of the sensors that they are compatible with LED luminaires.

- Provide power to the required point of installation (refer to BS7671 for correct cabling methods). Suitable IP rated junction boxes should be used where required
- Unfasten the screws at each end of the product to remove the diffuser
- Release the gear tray by pushing the release tabs outwards (see Fig. 1)

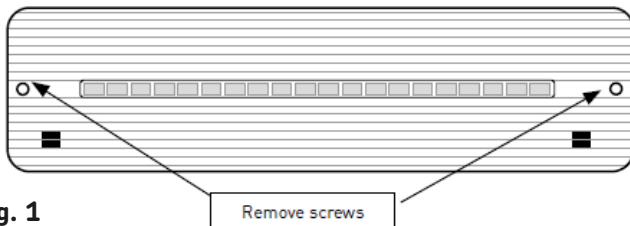


Fig. 1

- Round cable should be used for the mains supply if using compression glands for the drilling guides on the sides. The use of flat cable will cause water ingress
- Drill the fixing holes in the rear of the fitting. Mark the location of the fixing holes and drill ensuring not to infringe with any gas/water pipes or electrical cables
- Drill out one of the 20mm drilling guides and fit the grommet provided

- Feed the mains cable through the rubber grommet to retain IP rating, and secure the baseplate to the surface
- Replace the access plate and screws ensuring gasket is in place, then tighten the compression gland ensuring a tight seal to maintain the IP rating
- Connect the luminaire to the mains supply ensuring the correct polarity is observed (see Fig. 2):

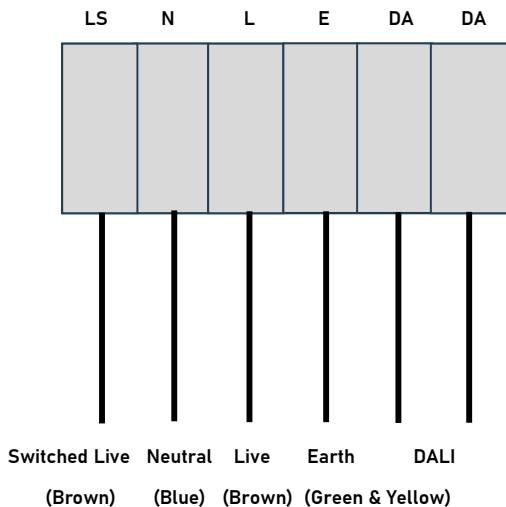


Fig. 2

- Ensure the battery is connected to the battery connector on the PCB
 - Replace the gear tray and diffuser ensuring seal is in place
 - Switch on and check for correct operation ensuring the green indicator LED is illuminated
 - We recommend, on commissioning the installation, a minimum charge period of 24 hours before carrying out an emergency duration test
- Relevant DALI software and control gear is required for use of this functionality.

WARNING

This product must be disconnected from the circuit if subjected to any high voltage or insulation resistance testing. Irreparable damage will occur if this instruction is not followed.

GENERAL

Clean the external surfaces with a damp cloth using a mild solution of detergent and warm water only, do not use aggressive cleaning products or solvents which may damage the product.

Do not use any source of high-pressure washers to maintain or clean this luminaire. Installing in areas where the temperature consistently drops below 0°C may shorten the battery life.

This product is non-dimmable.

This product should be recycled in the correct manner when it reaches the end of its life. Check local authorities for where facilities exist.

The batteries in this luminaire are Lithium Ion and must be disposed of correctly. Please contact the local authorities for the disposal of this toxic waste.

WARRANTY

This product has a warranty of 3 years (including battery) from date of purchase. Failure to install this product in accordance with the current edition of the IEE Wiring Regulations (BS7671), improper use, or removal of the batch code will invalidate the warranty. If this product should fail within its warranty period, it should be returned to the place of purchase for a free of charge replacement. ML Accessories does not accept responsibility for any installation costs associated with the replacement product. Your statutory rights are not affected. ML Accessories reserve the right to alter product specification without prior notice.

TESTING FOR EMERGENCY LUMINAIRES

Recommended routine test procedure in accordance with BS5266:

- Daily check – check LED charge indicator is illuminated
- Monthly functional test – simulate a mains supply failure for approx. 30 seconds by operation of key switch or switching off circuit breaker. Ensure normal supply is restored after test and ensure charge indicator is illuminated
- Annual 3-hour duration test – simulate a mains supply failure for 3-hour continuous test by operation of key switch or switching off circuit breaker. Ensure normal supply is restored after test and ensure charge indicator is illuminated
- If the luminaire fails any of the above tests, please contact a qualified electrician. See below for test record sheet

TEST RECORD SHEET

INITIAL COMMISSIONING 3 HOUR TEST		SIGNED						DATE			
MONTH	TEST	FIRST YEAR		SECOND YEAR		THIRD YEAR		FOURTH YEAR		FIFTH YEAR	
		SIGNED	DATE	SIGNED	DATE	SIGNED	DATE	SIGNED	DATE	SIGNED	DATE
1	FUNCTIONAL										
2	FUNCTIONAL										
3	FUNCTIONAL										
4	FUNCTIONAL										
5	FUNCTIONAL										
6	FUNCTIONAL										
7	FUNCTIONAL										
8	FUNCTIONAL										
9	FUNCTIONAL										
10	FUNCTIONAL										
11	FUNCTIONAL										
12	3 HOUR										

Installed by:

Installation date:

Contact number:

SUPPLIED BY:

(UK) MANUFACTURER

ML ACCESSORIES LTD, UNIT E CHILTERN PARK,
BOSCOMBE ROAD, DUNSTABLE LU5 4LT,
WWW.MLACCESSORIES.CO.UK

(EU) AUTHORISED REPRESENTATIVE

SLV LIGHTING GROUP,
DAIMLERSTRASSE 21-23,
52531 ÜBACH-PALENBERG, GERMANY
EMAIL: EPREL@GROUP.SLV.COM

MADE IN CHINA

230V
50Hz



IP65



0~
45°C
TA

ML
ACCESSORIES LTD



CE **UK**
CA



54