

INSTALLATION & MAINTENANCE MANUAL

SHE1BEMP / SHE1GEMP SHE2BEMP / SHE2GEMP

GENERAL INSTRUCTIONS

These instructions should be read carefully and retained after installation by the end user for future reference and maintenance.

These instructions should be used to aid installation of the following products: SHE1BEMP / SHE1GEMP / SHE2BEMP / SHE2GEMP

SAFETY

- This product must be installed in accordance with the latest edition of the IEE Wiring Regulations (BS7671) and current Building Regulations. If in any doubt, consult a qualified electrician
- · Please isolate mains prior to installation or maintenance
- Check the total load on the circuit (including when this luminaire is fitted) does not exceed the rating of the circuit cable, fuse, or circuit breaker
- Please note the IP (Ingress Protection) rating of this product when deciding the location for installation
- · This product is Class I and must be earthed
- · This product is IP65 rated

INSTALLATION

- Provide power to the required point of installation (refer to BS7671 for correct cabling methods). Suitable IP rated junction boxes should be used where required
- Remove the diffuser by unscrewing the four hex screws at the front of the diffuser
- Using the baseplate as a template, mark the location for, and drill the fixing holes ensuring not to infringe with any gas/water pipes or electrical cables
- Feed the mains cable through the rubber grommet to retain IP rating, and secure the baseplate to the surface
- · Ensuring correct polarity is observed, carefully wire as shown in Fig. 1

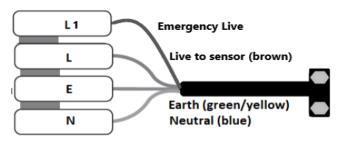


Fig. 1

- . Ensure the earth lead on the LED plate is secured correctly to the earth lead on the body of the fitting
- Fix the LED tray to the body
- Choose the required colour temperature by means of the three-position switch (see Fig. 2)


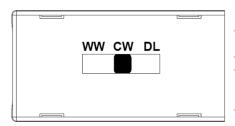


Fig. 2

- Please see DIP switch layout to set up the sensor
- · Replace the diffuser ensuring seal is in place
- Switch on and check for correct operation ensuring the green indicator LED is illuminated
- We recommend, on commissioning the installation, a minimum charge period of 24 hours before carrying out an emergency duration test

SENSOR DIP SWITCH LAYOUT



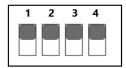

DIP SWITCH SETTINGS

Î ON		1	2	3	4	Open	Close
	ı	ON	ON	ON	ON	5 Lux	25 Lux
	II	ON	ON	ON	-	10 Lux	50 Lux
	Ш	ON	ON	-	ON	25 Lux	75 Lux
	IV	ON	ON	-	-	50 Lux	100 Lux
	v	ON	-	ON	-	100 Lux	200 Lux
	VI	ON	-	-	-	150 Lux	300 Lux
	VII	-	ON	-	-	200 Lux	400 Lux
	VIII	-	-	1	-	Disable	

When the ambient light level is below the "Open" lux level, the sensor switches on the luminaire. When the
ambient light level is above the "Close" lux level, the sensor switches off the luminaire

Note: The sensor fitted in this luminaire can differentiate between natural daylight and artificial light and will only be activated by natural daylight.

WARNING

This product must be disconnected from the circuit if subjected to any high voltage or insulation resistance testing. Irreparable damage will occur if this instruction is not followed.

This product is not suitable for installation in or near a coastal or marine environment.

GENERAL

This product contains a light source of energy efficiency class D to Regulation (EU) No. 2019/2015. This product contains a non-replaceable LED light source and a control gear which can be replaced by a professional.





Clean the external surfaces with a damp cloth using a mild solution of detergent and warm water only, do not use aggressive cleaning products or solvents which may damage the product.

This product is non-dimmable.

This product should be dismantled for disposal when it reaches the end of its life. Please see website for dismantling instructions.

This product should be recycled in the correct manner when it reaches the end of its life. Check local authorities for where facilities exist.

The batteries in this luminaire are Lithium Ion and must be disposed of correctly. Please contact the local authorities for the disposal of this toxic waste.

WARRANTY

This product has a warranty of 5 years (excluding battery) from date of purchase. Failure to install this product in accordance with the current edition of the IEE Wiring Regulations (BS7671), improper use, or removal of the batch code will invalidate the warranty. If this product should fail within its warranty period, it should be returned to the place of purchase for a free of charge replacement. ML Accessories does not accept responsibility for any installation costs associated with the replacement product. Your statutory rights are not affected. ML Accessories reserve the right to alter product specification without prior notice.

TESTING FOR EMERGENCY LUMINAIRES

Recommended routine test procedure in accordance with BS5266

- Daily check check LED charge indicator is illuminated
- Monthly functional test simulate a mains supply failure for approx. 30 seconds by operation of key switch
 or switching off circuit breaker. Ensure normal supply is restored after test and ensure charge indicator is
 illuminated
- Annual 3-hour duration test simulate a mains supply failure for 3-hour continuous test by operation
 of key switch or switching off circuit breaker. Ensure normal supply is restored after test and ensure charge
 indicator is illuminated
- If the luminaire fails any of the above tests, please contact a qualified electrician. See below for test record sheet

TEST RECORD SHEET												
INITIAL COMMISSIONING . 3 HOUR TEST		SIGNED					DATE					
3 HOUR TEST		FIRST YEAR		SECOND YEAR		THIRD YEAR		FOURTH YEAR		FIFTH YEAR		
MONTH	TEST	SIGNED	DATE	SIGNED	DATE	SIGNED	DATE	SIGNED	DATE	SIGNED	DATE	
1	FUNCTIONAL											
2	FUNCTIONAL											
3	FUNCTIONAL											
4	FUNCTIONAL											
5	FUNCTIONAL											
6	FUNCTIONAL											
7	FUNCTIONAL											
8	FUNCTIONAL											
9	FUNCTIONAL											
10	FUNCTIONAL											
11	FUNCTIONAL											
12	3 HOUR											

Installation date:

Installed by: Contact number:





















ML Accessories Limited LU5 4LT www.mlaccessories.co.uk